
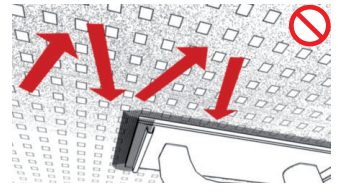
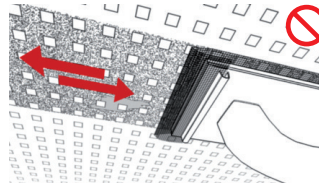


Note: On cardboard surfaces of special types of plasterboard (waterproofed, impregnated, with graphite content, with white pre-coating, etc.), test the suitability of the VoglFriestape-Set on site. Owing to the reduced absorption capacity of these cardboard bases, the VoglFriestape-Set may otherwise cause holes to show or bubbles to form.


Check cardboard area; sand panel joints and screw holes!

Important! Failure to observe this may cause holes to show!

Unpack tape (remove foil bag) approx. 24 h prior to installation to allow special paper to acclimatise.

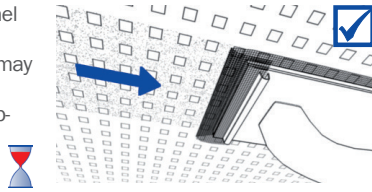

After sanding, wipe joint area with damp sponge to remove any dust or swarf.

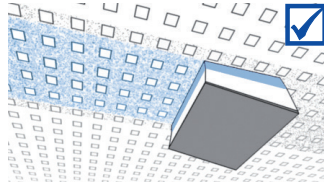


General site conditions / Manufacturer's instructions:




- Always store liquid glue in ** frost free environment **
- Unpack tape (remove foil bag) approx. 24 h prior to installation to allow special paper to acclimatise.
- Stir liquid glue well before use!
- Working temperature should be at least +10 °C and job site temperature not below +5 °C
- Avoid sudden heating and cooling of rooms
- Relative humidity: 50 - 70 %
- Self-levelling, cement or asphalt screeds must be fully dried – no residual moisture
- Apply tape edge-to-edge only, i.e. no overlapping
- Use liquid glue only undiluted

Load lambskin roller with liquid glue and roll it downward over paint grid.


Vogl Liquid Glue = ready mix

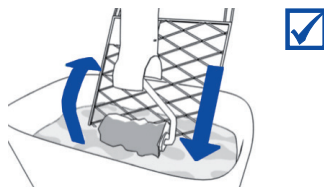

Roll liquid glue onto frieze area, then apply tape (making sure perforation is completely covered) and press it down with lambskin roller. Once tape has dried, open any half-open holes and then close them with joint compound.

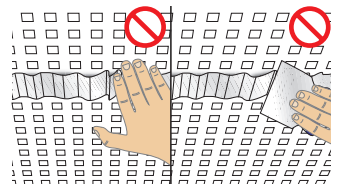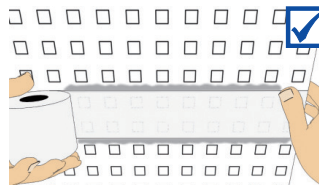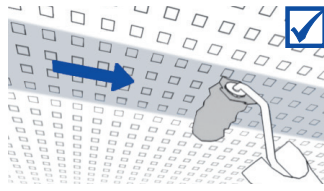


Different widths of tape can be combined without difficulty. However, make sure to lay tapes edge-to-edge. Under no circumstances should tapes be overlapped!

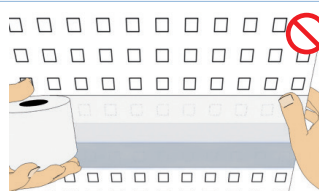


Re-load lambskin roller with liquid glue and roll it downwards over paint grid.

Vogl Liquid Glue = ready mix

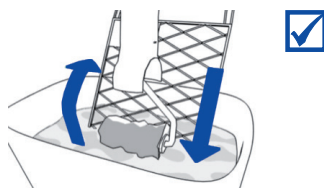

Apply another coat of liquid glue on frieze area, always working "wet on wet".

Drying time: Min. 12 h



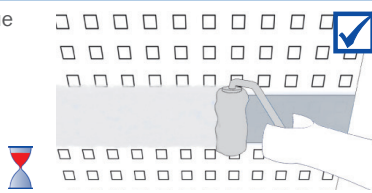


Surface treatment for painters


(in accordance with ATV painting work DIN 18363):

- Only apply coating by roller; spray application is not permitted!
- Prior to application of paint coat, a primer should generally be applied in accordance with manufacturer's specifications
- Manufacturer's recommended drying times for both primer and finishing coat must be strictly observed
- Alkaline coatings are unsuitable for plasterboards
- 3 coats of paint must be applied (1 prime coat + 2 finishing coats), and recommended drying times adhered to
- Always consult system manufacturer's technical data sheets for primers and finishing coats

If necessary, smooth glue texture on tape's visible surface by gently sanding – **do not cross sand!**

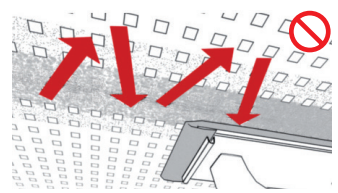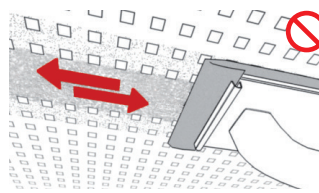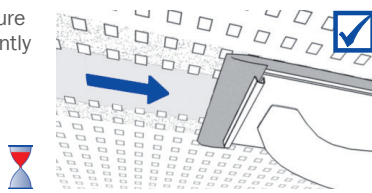

Once fully dry, any holes covered with tape can be re-opened using a sharp blade anytime.

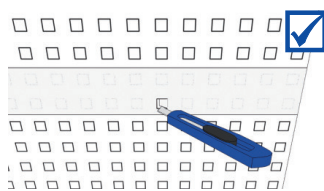

Scope of delivery, VoglFriestape-Set:

Vogl Liquid Glue, Vogl Tape, stirring paddle, paint grid, lambskin roller, abrasive mesh, sanding paper, sponge.
VoglFriestape-Set is available in various tape widths (20 mm, 50 mm, 75 mm, 100 mm, 150 mm).

Note: VoglFriestape-Set is only recommended for hole sizes up to max. 20 mm.